

MB&F

Horological Machine N°9

Horological Machine N°9


Functions

05

Operating instructions

07


Horological Machine N°9

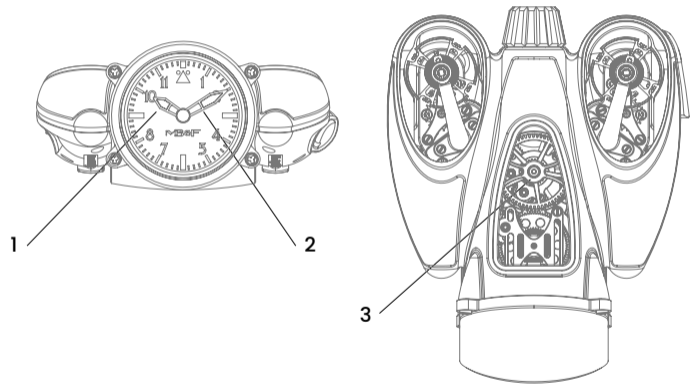

Functions

- 1 Hour
- 2 Minute
- 3 Planetary differential transmitting the average rate of the two regulators to the single gear train

Horological Machine N°9

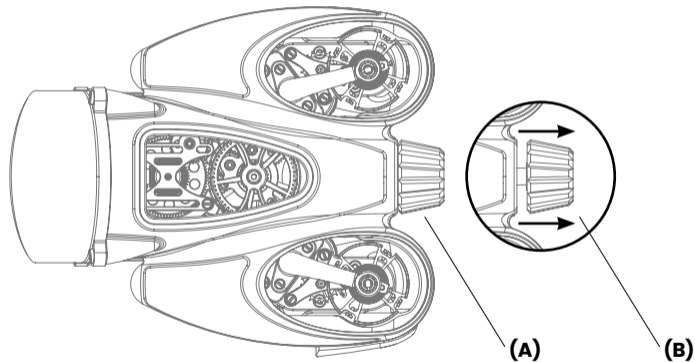

Operating instructions

1. Winding

Your watch is equipped with an automatic movement. However, if it does require manual winding – for example, when it is fully unwound – release the crown from its locked position by pushing inwards and turning anti-clockwise; the crown will be released (position 1). When it has been released, wind the crown several turns clockwise.

2. Time setting

Pull crown to position “out” (A) and turn the crown to set the time. Push the crown back against the case when finished.

